


laservision

laser safety spectacle R01P1P20




Article number: R01P1P201001
GTIN: 4050369053595
Unit: piece
Weight incl. packaging: 0,44 kg
Weight excl. packaging: 0,08 kg

Color view

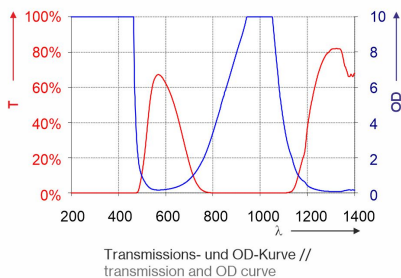

Filter curve

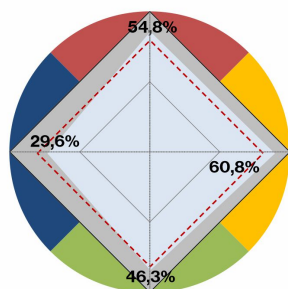

Highlights

- protection levels are certified acc. EN 207
- full protection within the UV, VIS, NIR and IR range
- suitable for diode laser at 808nm to 1064nm, for UV-laser and Nd:YAG
- disc and fiber laser as well as CO₂
- also available as laser safety window P1P20 (6mm)
- very good daylight transmission (app. 52%)
- good colour view

The laservision laser safety eyewear R01.P1P20.1001 is particularly suitable for UV lasers and blue lasers up to 466 nm as well as IR lasers (diode, Nd: YAG, disk and fiber lasers) in the range 880 - 1075 and CO₂ lasers and has a daylight transmission of approx. 52%. The full protection spectacle can be combined with an Rx- corrective insert. The small, reinforced goggle with adjustable temples and a gold-colored filter is characterized with a light weight and a really good field of view. The shipment includes a spectacle cord and a metal box, which can also be used as its storage box.

COATING:	no coating
FILTER CURVATURE:	Flat filter
PROTECTION CLASS / NORM:	EN 207 full protection
CUSHION:	No cushion
FRAME TYPE:	Spectacle with Rx insert option
PROPERTIES:	Adjustable temples M-protection rating
FRAME:	R01
FILTER:	P1P20
FILTER COLOUR:	Gold
COLOUR RECOGNITION:	Good
FILTER THICKNESS:	ca. 6mm
FILTER MATERIAL:	Plastic
FILTER TECHNOLOGY:	Absorption filter
PROTECTION RANGE:	Infrared near infrared ultraviolet visible
VISUAL BRIGHTNESS:	Very good

laser safety spectacle R01P1P20

VLT (APPROX.):

52%

WAVELENGTH	OD	OPERATING MODE / TESTED PROTECTION LEVEL
180 - 315	(OD10+)	D LB10 + IR LB4 + M LB6Y
>315 - 462	(OD8+)	D LB7 + IR LB8 + M LB8Y
>462 - 466	(OD6+)	DIRM LB6
>466 - 472	(OD4+)	DIRM LB4
>472 - 490	(OD1+)	DIRM LB1
735 - <830	(OD1+)	DIRM LB1
830 - <880	(OD4+)	DIRM LB4
880 - <910	(OD6+)	DIRM LB6
910 - <940	(OD7+)	DIRM LB7
940 - 1055	(OD8+)	D LB7 + IR LB8 + M LB8Y
>1055 - 1064	(OD7+)	DIRM LB7
>1064 - 1075	(OD6+)	DIRM LB6
>1075 - 1084	(OD5+)	DIRM LB5
>1084 - 1095	(OD4+)	DIRM LB4
>1095 - 1150	(OD1+)	DIRM LB1
3945 - <5180	(OD4+)	DI LB4 + R LB3Y
5180 - 25000	(OD7+)	D LB5 + I LB5Y + R LB3Y